

**PART NO. DESCRIPTION**

**PUSH BUTTONS AND ACCESSORIES**



G303	AF3 GREEN PUSH BUTTON 30MM
G304	AF4 RED PUSH BUTTON
G322	AS2-2P 2-POSITION SELECTOR SWITCH 30MM
G311	S11 CONTACT BLOCK
G312	S12 CONTACT BLOCK 1N/O 1N/C



G600	P9XPNVG GREEN PUSH BUTTON
G601	P9XPNRG RED PUSH BUTTON
G602	P9XPNNG BLACK PUSH BUTTON
G603	P9XPNGG YELLOW PUSH BUTTON



G604	P9XPNLG BLUE PUSH BUTTON
G605	P9XEM4RN MUSHROOM MOMENTARY PUSH BUTTON
G606	P9XER4RN MUSHROOM TWIST



G607	P9XET4RL1 MUSHROOM ILLUMINATED PUSH-PULL 40MM
------	---



G610	P9XSMDON 2-POSITION SELECTOR SWITCH
G611	P9XSMZON 3- POSITION SELECTOR SWITCH
G612	P9XSMD5N 2-POSITION SPRING RETURN SELECTOR SWITCH
G613	P9XSMZ3N 3-POSITION SPRING RETURN SELECTOR SWITCH



G615	P9XSCDOK95 2-POSITION KEY SWITCH
G616	P9XSCZ0T95 3-POSITION KEY SWITCH
G617	P9XSCI5C95 2-POSITION SPRING RETURN KEY SWITCH
G618	P9XSCZ3C95 3-POSITION SPRING RETURN KEY SWITCH



G620	P9DPLVRG00 DOUBLE PUSH BUTTON
------	-------------------------------



G648	ENGRAVED LEGEND PLATE
G649	080XTGR02 EMERGENCY STOP ROUND PLATE



G650	P9B10VN 1N/O CONTACT BLOCK
G651	P9B01VN 1N/C CONTACT BLOCK
G652	P9B20VN 2NO CONTACT BLOCK
G654	P9B02VN 2N/C CONTACT BLOCK
G662	P9B11VN 1N/O 1N/C CONTACT BLOCK
G664	P9B10VA N/O EARLY CLOSING