

PART NO. DESCRIPTION

PUSH BUTTONS AND ACCESSORIES CONTINUED



G501	LAY5-BA4 RED PUSH BUTTON
G550	PBMPG5 PUSH BUTTON GREEN
G551	PBMPR5 PUSH BUTTON RED
G552	PBMPB5 PUSH BUTTON BLACK
G553	PBMPY5 PUSH BUTTON YELLOW
G554	PBMPL5 PUSH BUTTON BLUE



G555	PBMS25 SELECTOR SWITCH
G556	PBMS33 SELECTOR SWITCH



G560	PBME1G ENCLOSURE 1 BUTTON
G561	PBME1R ENCLOSURE 1 BUTTON



G562	PBME2RG ENCLOSURE 2 BUTTON
------	----------------------------

G563	PBME3 ENCLOSURE 3 BUTTONS
------	---------------------------



G565	PBMEE ENCLOSURE E-STOP
------	------------------------