

PART NO. DESCRIPTION

PUSH BUTTONS AND SWITCHES




- L600 MS-FB-GN GREEN PUSH BUTTON
- L601 MS-FB-RD RED PUSH BUTTON
- L602 MS-FB-BK BLACK PUSH BUTTON
- L603 MS-FB-YW YELLOW PUSH BUTTON
- L604 MS-FB-BE BLUE PUSH BUTTON




- L605 MS-EB4 MUSHROOM PUSH MOMENTARY
- L606 MS-EB4T MUSHROOM PUSH BUTTON TWIST RELEASE



- L610 MS-SL20 2-POSITION SELECTOR SWITCH
- L611 MS-SL30 3-POSITION SELECTOR SWITCH
- L612 MS-SL21 2-POSITION SELECTOR SWITCH SPRING RETURN
- L613 MS-SL31 3-POSITION SELECTOR SWITCH SPRING RETURN

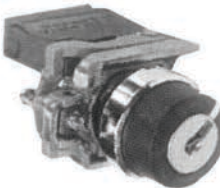

- L615 MS-KS20 2-POSITION KEY SWITCH
- L616 MS-KS30 3-POSITION KEY SWITCH
- L617 MS-KS21 2-POSITION KEY SWITCH SPRING RETURN
- L618 MS-KS33 3-POSITION KEY SWITCH SPRING RETURN
- L619 MS-KS34 3-POSITION KEY SWITCH SPRING RETURN

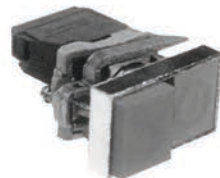

- L620 MS-CB2 DOUBLE PUSH BUTTON



- L622G MS-IL-G GREEN ILLUMINATED PUSH BUTTON
- L622R MS-IL-G RED ILLUMINATED PUSH BUTTON
- L622Y MS-IL-Y YELLOW ILLUMINATED PUSH BUTTON

CONTACT BLOCKS



- L650 MS-01 1N/O CONTACT BLOCK
- L651 MS-02 1 N/C CONTACT BLOCK
- L665 ZBV-6 LAMP HOLDER